




LS 9208 Programming Guide

To program the scanner to interface with your host type, you'll need to scan the bar codes on this guide in numerical order.

1.

SET ALL DEFAULTS

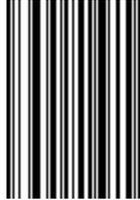

2.

STANDARD RS-232




3.

BAUD RATE 9600



4.

EVEN

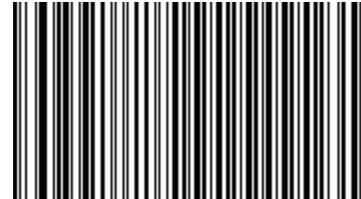


5.

1 STOP BIT



6.

7 BIT

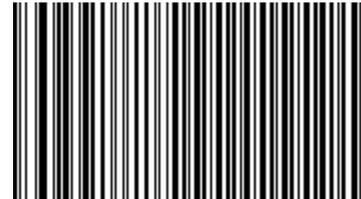

BCP Systems, Inc.
1770 East Miraloma Avenue
Placentia, CA 92870
(714) 572-9288
Page 1 of 6





LS 9208 Programming Guide

To program the scanner to interface with your host type, you'll need to scan the bar codes on this guide in numerical order.

7.



8.



9.



10.



11.



12.





LS 9208 Programming Guide

To program the scanner to interface with your host type, you'll need to scan the bar codes on this guide in numerical order.


13.

DISABLE UCC/EAN-128




14.

CODE 39 - ANY LENGTH

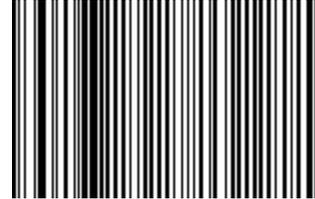


15.

ENABLE CODE 39 FULL ASCII

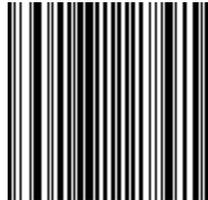


16.

ERASE ALL RULES

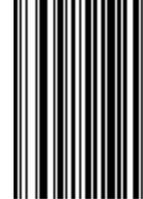


17.

BEGIN NEW RULE

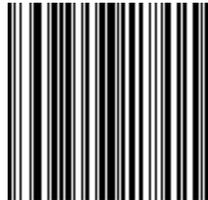

18.

UPC-A

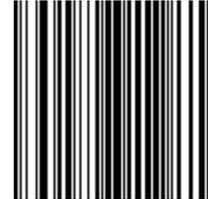



LS 9208 Programming Guide

To program the scanner to interface with your host type, you'll need to scan the bar codes on this guide in numerical order.


19.




20.



21.

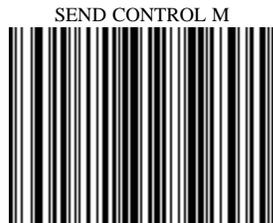

22.

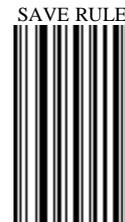

23.



24.







LS 9208 Programming Guide

To program the scanner to interface with your host type, you'll need to scan the bar codes on this guide in numerical order.


25.

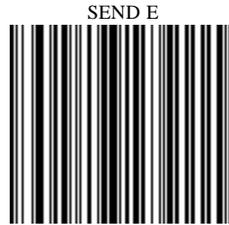


26.

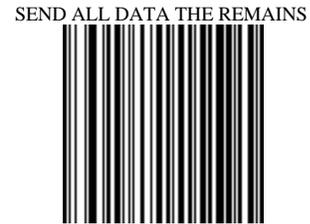

27.

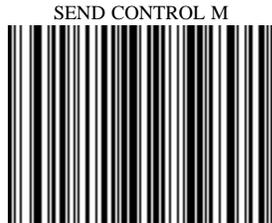

28.

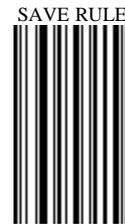

29.



30.






LS 9208 Programming Guide

To program the scanner to interface with your host type, you'll need to scan the bar codes on this guide in numerical order.


31.

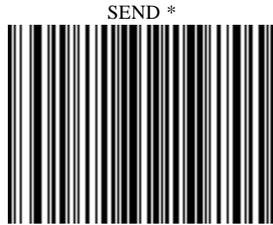


SEND *

32.

SAVE ALL DATA THAT REMAINS

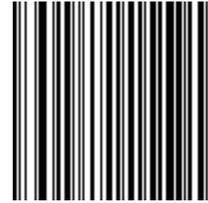

33.

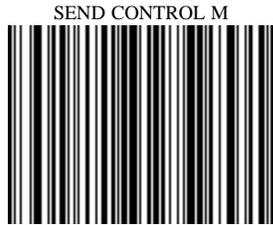

SEND CONTROL M

34.

SAVE RULE

